


1964-66 MUSTANG GAS CAP LOCK
INSTALLATION INSTRUCTIONS
ACC-9030-LOCK
APPLICATION: 64-66 MUSTANG

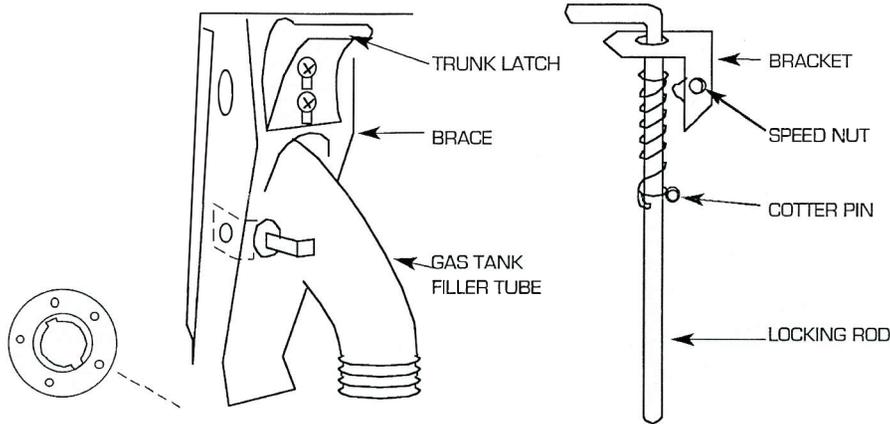

CAUTION: Use safety glasses for all metal cutting, punching and drilling.


TOOLS REQUIRED:

WRENCH, CENTER PUNCH, DRILL, WIRE CUTTERS

1. Remove gas cap cable from fuel filler neck by unscrewing nut on inside of trunk.
2. Using wire cutters, remove cable from back of gas cap.
3. Re-install gas cap on the filler neck to it's original position. Make sure logo design is in correct position.
4. Using pencil or scribe, mark on the back of gas cap through the hole in the filler neck. This marks the position for the locking pin.
5. Remove cap and place face-down on a flat padded surface. With cap secured to table, center punch your pencil mark and drill a 1/4" hole through the back plate. **DO NOT DRILL THROUGH THE FRONT OF THE GAS CAP!**
6. Mount the enclosed speed nut to the locking rod bracket.
7. Remove wire harness strap from R/H (Passenger) side of filler neck support.
8. Slide the bracket onto the rod and insert through the hole in the filler neck.
9. Attach the bracket to the filler neck support using the enclosed speed nut through the empty wire harness hole.
10. Re-install gas cap onto the filler neck. To remove gas cap, open trunk, pull locking pin and rotate the gas cap. Release the pin and remove the cap!

ACC-9030-LOCK_INST

1964-66 MUSTANG GAS CAP LOCK
INSTALLATION INSTRUCTIONS
ACC-9030-LOCK
APPLICATION: 64-66 MUSTANG

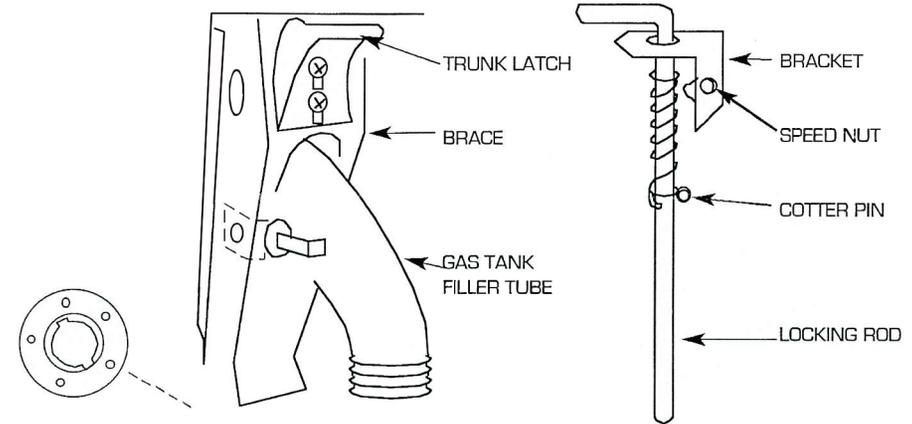

CAUTION: Use safety glasses for all metal cutting, punching and drilling.

TOOLS REQUIRED:

WRENCH, CENTER PUNCH, DRILL, WIRE CUTTERS

1. Remove gas cap cable from fuel filler neck by unscrewing nut on inside of trunk.
2. Using wire cutters, remove cable from back of gas cap.
3. Re-install gas cap on the filler neck to it's original position. Make sure logo design is in correct position.
4. Using pencil or scribe, mark on the back of gas cap through the hole in the filler neck. This marks the position for the locking pin.
5. Remove cap and place face-down on a flat padded surface. With cap secured to table, center punch your pencil mark and drill a 1/4" hole through the back plate. **DO NOT DRILL THROUGH THE FRONT OF THE GAS CAP!**
6. Mount the enclosed speed nut to the locking rod bracket.
7. Remove wire harness strap from R/H (Passenger) side of filler neck support.
8. Slide the bracket onto the rod and insert through the hole in the filler neck.
9. Attach the bracket to the filler neck support using the enclosed speed nut through the empty wire harness hole.
10. Re-install gas cap onto the filler neck. To remove gas cap, open trunk, pull locking pin and rotate the gas cap. Release the pin and remove the cap!

ACC-9030-LOCK_INST