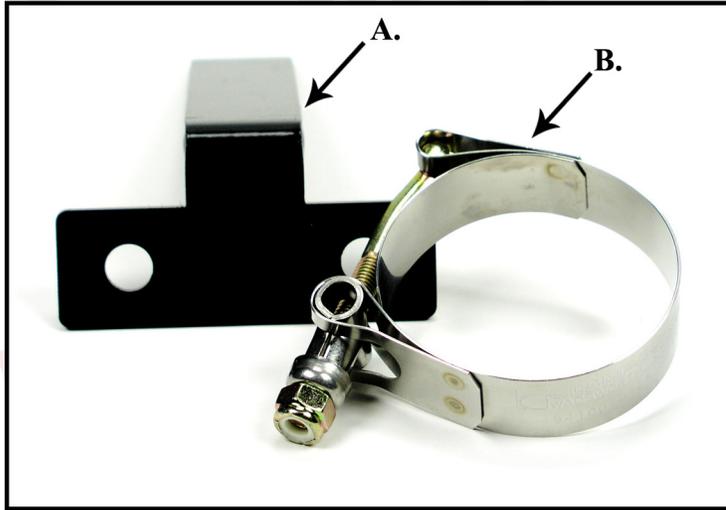


# Classic Chevy Floor Mount Installation Instructions

For Part #'s 2401400010, 2402400010

---



**Figure 1**

**The Classic Chevy Floor Mount is made up of two pieces:**

- A.) T-shaped L Bracket
- B.) Clamp

The T shaped bracket mounts in the original bolt holes in the inside floor of your Chevy. The long extension on the L Bracket will point towards the driver. Slide the clamp up the tube of the steering column. The steering column should sit above the L Bracket extension and will slide through the floor board. Once the column is in place, slide the clamp down over the extension of the floor bracket and around the column. Tighten all fasteners when you are comfortable with the installation. Your column is now secured to the floor to prevent any movement.

**\*PLEASE NOTE:** The enclosed floor mount has a "hot dip" black oxide finish. It would be important to put a permanent finish on it before you install this floor mount.



*ididit inc.* 610 S. Maumee St. 49286 Tecumseh, MI • PH: 517-424-0577 • FAX: 517-424-7293 • [ididitinc.com](http://ididitinc.com)

Instruction #: 8000010199 REV 12/12